

# NISSAN DIESEL AMERICA, INC.

## TECHNICAL BULLETIN GE-30

DATE: AUGUST 11, 2004  
MODEL YEAR: 2005  
ENGINE MODEL: J05D-TA/J08E-TE  
CHASSIS MODEL: UD1300 ~ UD3300  
BULLETIN NUMBER: GE-30

FILE IN THE GENERAL SECTION OF THE TECHNICAL BULLETIN BINDER

### 2005 MODEL YEAR KEYLESS ENTRY PROGRAMMING PROCEDURES

#### PURPOSE

Nissan Diesel America, Inc. has introduced a keyless entry system on the 2005 model year vehicles. Each vehicle will arrive from the factory with two (2) programmed keyless entry controllers.

#### INSTALLATION AND USE

The keyless entry system can accommodate up to four (4) controllers. The controller registration and programming instructions are found in this bulletin.

Additional or replacement keyless entry controllers are available through the NDA Parts Operations Department. As many as four (4) controllers can be programmed in to the ECU.

#### KEYLESS ENTRY CONTROLLER PROGRAMMING PROCEDURE

##### START

Programming is performed from the Driver's Seat

**Step 1:** Close both doors completely

**Step 2:** Manually lock the driver's door

**Step 3:** Insert the key into the ignition switch and cycle the key from "OFF" to "ACC" six times within 10 seconds. Doors will unlock automatically to indicate Programming Mode.

**NOTE:** If doors failed to unlock automatically at this point, then manually unlock the driver's door, open the door, turn the ignition switch to "OFF" and repeat Steps 1 through 3.

**Step 4:** Turn the ignition switch to "ON" within 3 seconds

**Step 5:** Manually lock the driver's door

**Step 6:** Press the UNLOCK button on the controller

**Step 7:** Press the LOCK button on the controller  
**NOTE:** Repeat Steps 6 and 7 for any additional controllers

**Step 8:** Press the UNLOCK button on the controller once more

**Step 9:** Open the driver's door

**Step 10:** Turn the ignition switch to "OFF". **PROGRAMMING COMPLETE**

THE INFORMATION CONTAINED IN THIS BULLETIN SHOULD NOT BE INTERPRETED AS THE BASIS FOR WARRANTY CLAIMS

FOR THE INDICATED PERSONNEL BELOW, PLEASE READ, INITIAL, AND ROUTE TO THE FOLLOWING:

X	SERVICE MANAGER	X	WARRANTY MANAGER	X	SERVICE TECHNICIANS INITIAL BELOW:		
X	PARTS MANAGER	X	SHOP FOREMAN				