



SUBJECT: DPF MAINTENANCE INDICATOR LIGHT

Department: Service
Section: Engine
Model(s): J05/J08
Model Year(s): 2008~2010
Effective Date: 05/24/2010
Form #: TSB EN-41
Rev #: 00
Supersedes: New

Purpose: To advise dealers of the purpose of the DPF maintenance indicator light.

Light Function & Purpose: The DPF maintenance indicator light will illuminate at 200,000 mile intervals based on the odometer accumulated mileage. It is not an indication of system trouble when the light illuminates. The purpose of the light is to notify the operator that the vehicle should be taken to an authorized UD Truck dealer for the scheduled DPF system maintenance.

Service Recommendation: Follow the DPF recommended maintenance procedure outlined in the subsection "Exhaust System" located in the "Engine" section of the appropriate year model UD Trucks service manual. Once the necessary maintenance has been performed, follow the reset procedure to reset the DPF module and turn the maintenance indicator light off.

Green



The Information contained in this bulletin should not be interpreted as the basis for a warranty claim.